


## MONOCOUCHE **XF**

Through Colour Cement based render system

### MONOCOUCHE XF: Best practice installation guidance

- Bond 15mm UPVC profile beads using Monocouche XF or MonoBase XF material only.
- Apply 4mm layer of MonoBase XF over the entire surface within the bonded beads.
- Imbed MonoMesh XF into the entire MonoBase XF layer whilst wet ensuring that all mesh is pushed below the surface.
- Comb/key the MonoBase XF horizontally and leave to dry sufficiently.
- Hand or machine apply Monocouche XF to 2 - 3mm past the UPVC beads, leave to dry sufficiently and scratch back to achieve a consistent textured finish.

#### Best practice build up

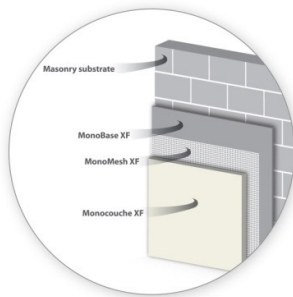

MonoBase XF applied to 4mm thickness over substrate

MonoMesh XF imbedded into entire MonoBase XF layer

Monocouche XF applied and finished level with beading

#### Mesh at openings

- To improve resistance to movement at openings it is advisable to bed a second diagonal layer of MonoMesh XF over the corners of openings to create a stress absorbing zone.

